
# Dramaläb


**Serial Monitor** 

#### **Serial Monitor**

- communication between the Arduino board and a computer or other devices
- All Arduino boards have at least one serial port (also known as a UART or USART)
- communication on pins 0 (RX) and 1 (TX)

```
void setup() {
  Serial.begin(9600);
  Serial.print("Arduino is ");
  Serial.print("currently executing ");
  Serial.println("the setup method.");
void loop() {
   if (Serial.available() > 0) {
     char incomingChar = Serial.read();
      Serial.print("Arduino received ");
      Serial.println(incomingChar);
```

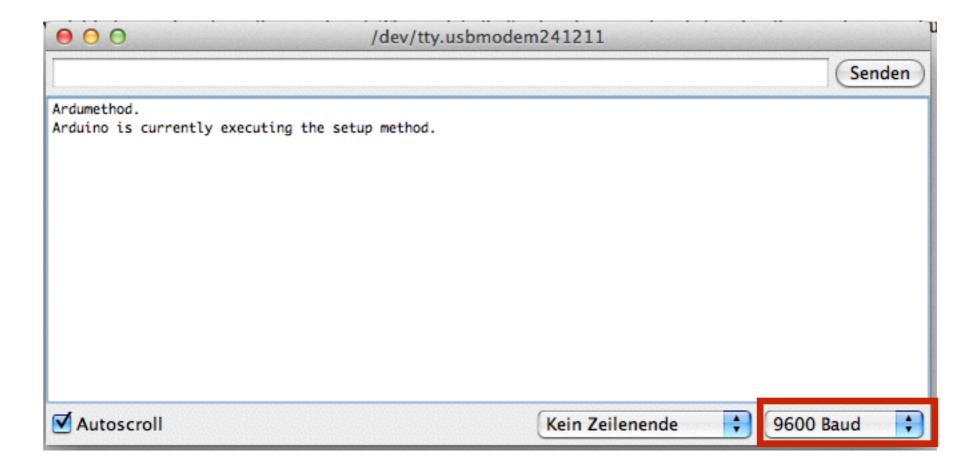

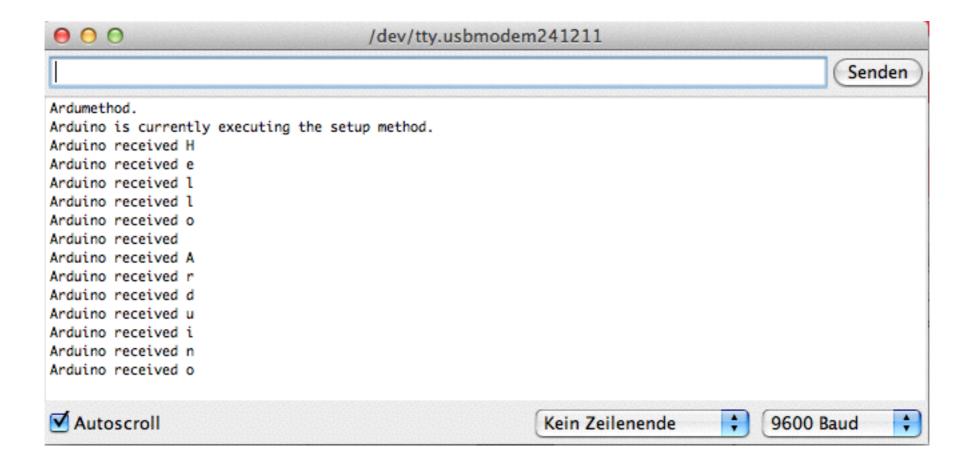

Tips and Tricks:

reading numbers: Serial.parseFloat(), Serial.parseInt()

read until specific character found: Stream.readBytesUntil()